


# SHAD

## HONDA CB 650 F '14 KIT TOP HOCF64ST

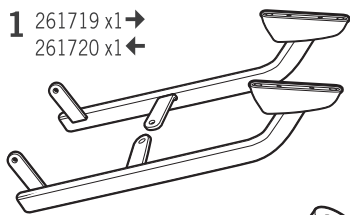

1 261719 x1 →  
261720 x1 ←



2 260417 x2  
Ø16 Ø9 x 16



3 303020 x 2  
Ø8



4 304036 x2  
M8 x 45 Din 7380



5 260760 x2  
Ø20 Ø11 x 16



6 303025 x2  
Ø10



7 304209 x2  
M10 x 45



8 304081 x4  
M8 x 20 Din 7380



9 303018 x4  
Ø8



### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)


Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.


(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

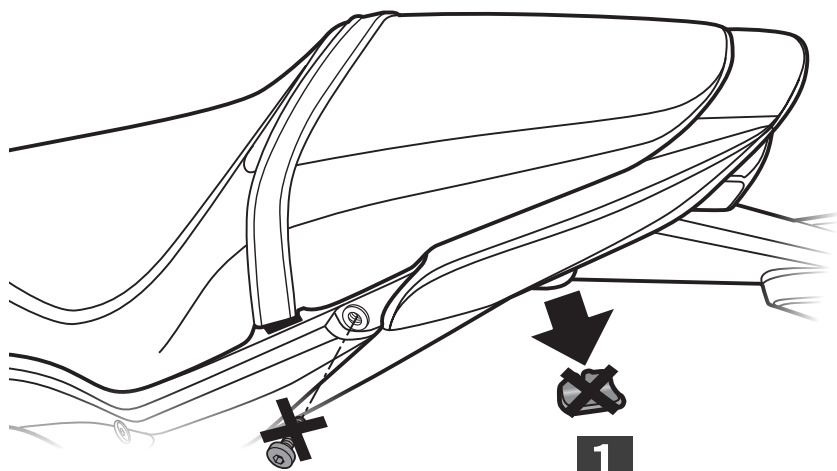

2

1

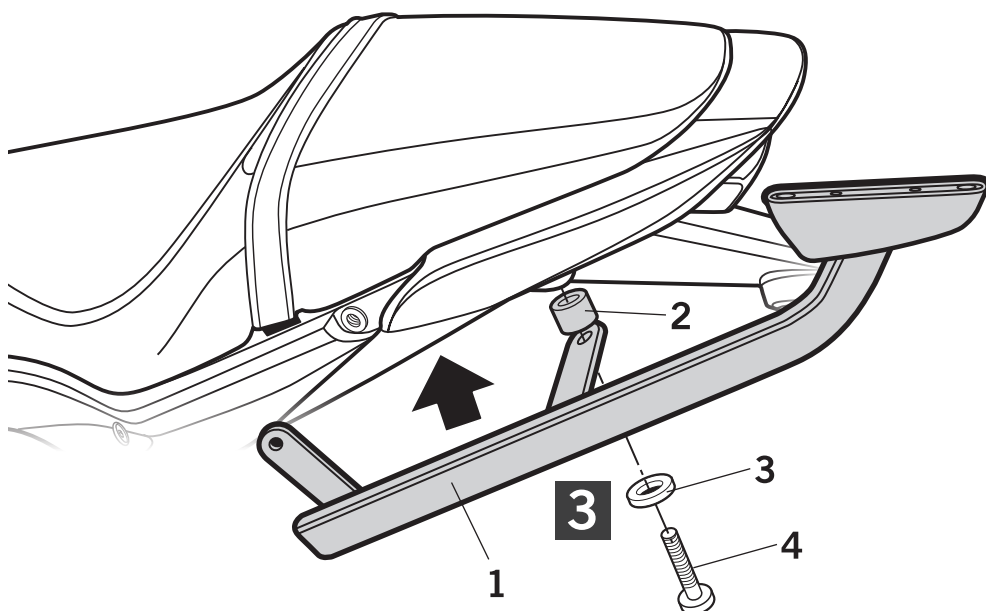

3

3

4

1

