



## SPLINED ADAPTER MOUNT

8818

### REAR OEM PEG MOUNTS, PROVIDES BOTH FOLDING AND STATIONARY MOUNTING OPTIONS

#### FITS MODELS:

**HONDA**, ALL '02-UP VTX1800 & 1300 MODELS, ALL '00-UP 750 AERO/SPIRIT/ACE MODELS, ALL '96-UP SHADOW 600 VLX & DELUXE, ALL '96-'04 750 MAGNA AND ALL '97-'04 VALKYRIE

**SUZUKI**, ALL '98-UP BOULEVARD C90/INTRUDER 1500, ALL '05-UP BOULEVARD C50 & M50, ALL '94-'04 VOLUSIA/MARAUDER 800, ALL '95-UP BOULEVARD S83/INTRUDER 1400

**YAMAHA**, ALL '99-UP ROAD STAR MODELS (EX. WARRIOR), ALL '99-UP V STAR 1100, ALL '98-UP V STAR 650, ALL VIRAGO 750 & 1100, ALL '96-'01 ROYAL STAR WITH OEM REAR PEGS, ALL '09-UP V STAR 950

### PARTS INCLUDED

- 2 Splined Adapter Mount
- 1 Hardware Kit, including:
  - 2 Spacer
  - 4 D-Spring Washer
  - 2 1/4-20 x 3/8 Stainless Steel Set Screw (SSS)
  - 2 #10-32 x 1 SSS
- 1 Installation Instructions

**NOTE** With installation of footpegs that are larger than stock folding peg, the up position may be limited depending on the angle of the OEM peg mount and motorcycle clearance. Rotating the angle of the peg on the Splined Peg Adapter will vary the folding peg position to add or reduce clearance.

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of Hex wrenches, combination wrenches, set of sockets and ratchet, needle nose pliers

#### CUSTOMER SERVICE

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**Kuryakyn®**

## PROCEDURE

**STEP 1** Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Remove the hardware securing the footpeg to the footpeg mount; set it aside, it will be re-used.

**STEP 3** Remove the existing footpegs from the mounts and set them aside, they will not be re-used.

**STEP 4** Test fit the tube spacer over the removed OEM footpeg mounting pin.

**NOTE** The spacer may not be needed in some applications.

**STEP 5** If the spacer fits over the mounting pin, insert an included spacer in one of the Splined Adapter Mounts as shown in PIC.1. The spacer is press fit.

**STEP 6** Thread a 1/4-20 x 3/8 SSS into the lower hole in the Adapter Mount as shown in PIC.1. Ensure that the hex head end of the setscrew is threaded into the Adapter Mount so that it can be accessed from the through hole in the splined face. See PIC.1.

**STEP 7 FOR FOLDING FLOORBOARDS THAT REQUIRE A SOLID MOUNT.** Thread a #10-32 x 1 SSS into the upper hole in the Adapter mount as shown in PIC.1. Install flush with the back of the adapter. Ensure that the hex head end of the setscrew is threaded into the Adapter Mount so that it can be accessed through the hole in the splined face. See PIC.1.


**NOTE** The four "D" Spring Washers have been included to take up excessive freeplay and add tension for folding pegs in the "up position". They will not be necessary in some instances. Install the "D" Spring Washers on either side of the Splined Adapter Mount with the flat of the "D" facing inboard.

**STEP 8** Install the Adapter Mount in the footpeg or floorboard mount on the motorcycle using the hardware removed in STEP 2.

**STEP 9** Adjust the angle of the Adapter Mount. Insert the correct size hex wrench in the lower hole in the splined face of the Adapter Mount and turn the setscrew clockwise for a higher angle and counterclockwise for a flatter angle.

**STEP 10 FOR FOLDING FLOORBOARDS THAT REQUIRE A SOLID MOUNT.** Insert the correct size hex wrench through the top hole in the splined face of the Adapter Mount and turn the setscrews clockwise until they contact the footpeg mount on the motorcycle. This will "lock" the Adapter Mount in place against the footpeg mount on the motorcycle

**STEP 11** Install the new footpeg or floorboards on the Adapter Mount. Refer to the instructions included with the new footpegs for more information.

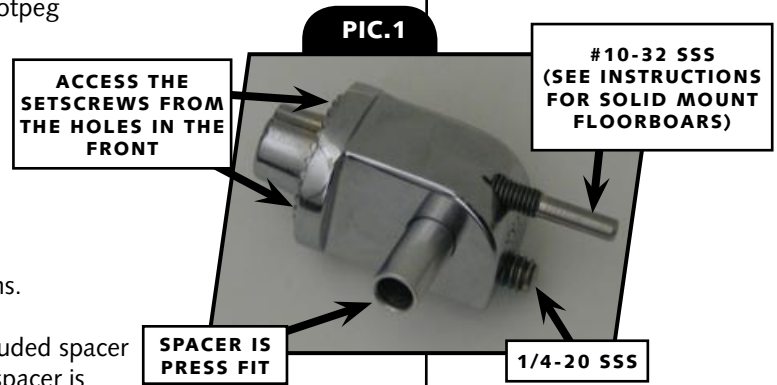

**PAGE**

**2**

**SPLINED ADAPTER MOUNT**

**INSTALLATION**

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**STEP 12** Repeat STEP 2 through STEP 11 for the other side.

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

**WARNING!** IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

*Ride On!*

**Küryakyn®**

**PAGE**

**3**

**SPLINED ADAPTER MOUNT**

**INSTALLATION**